



# Gray Resin Settings for the B9Creator

1. Launch your B9Creator Software
2. From the navigation menu select Settings>Materials Catalog...

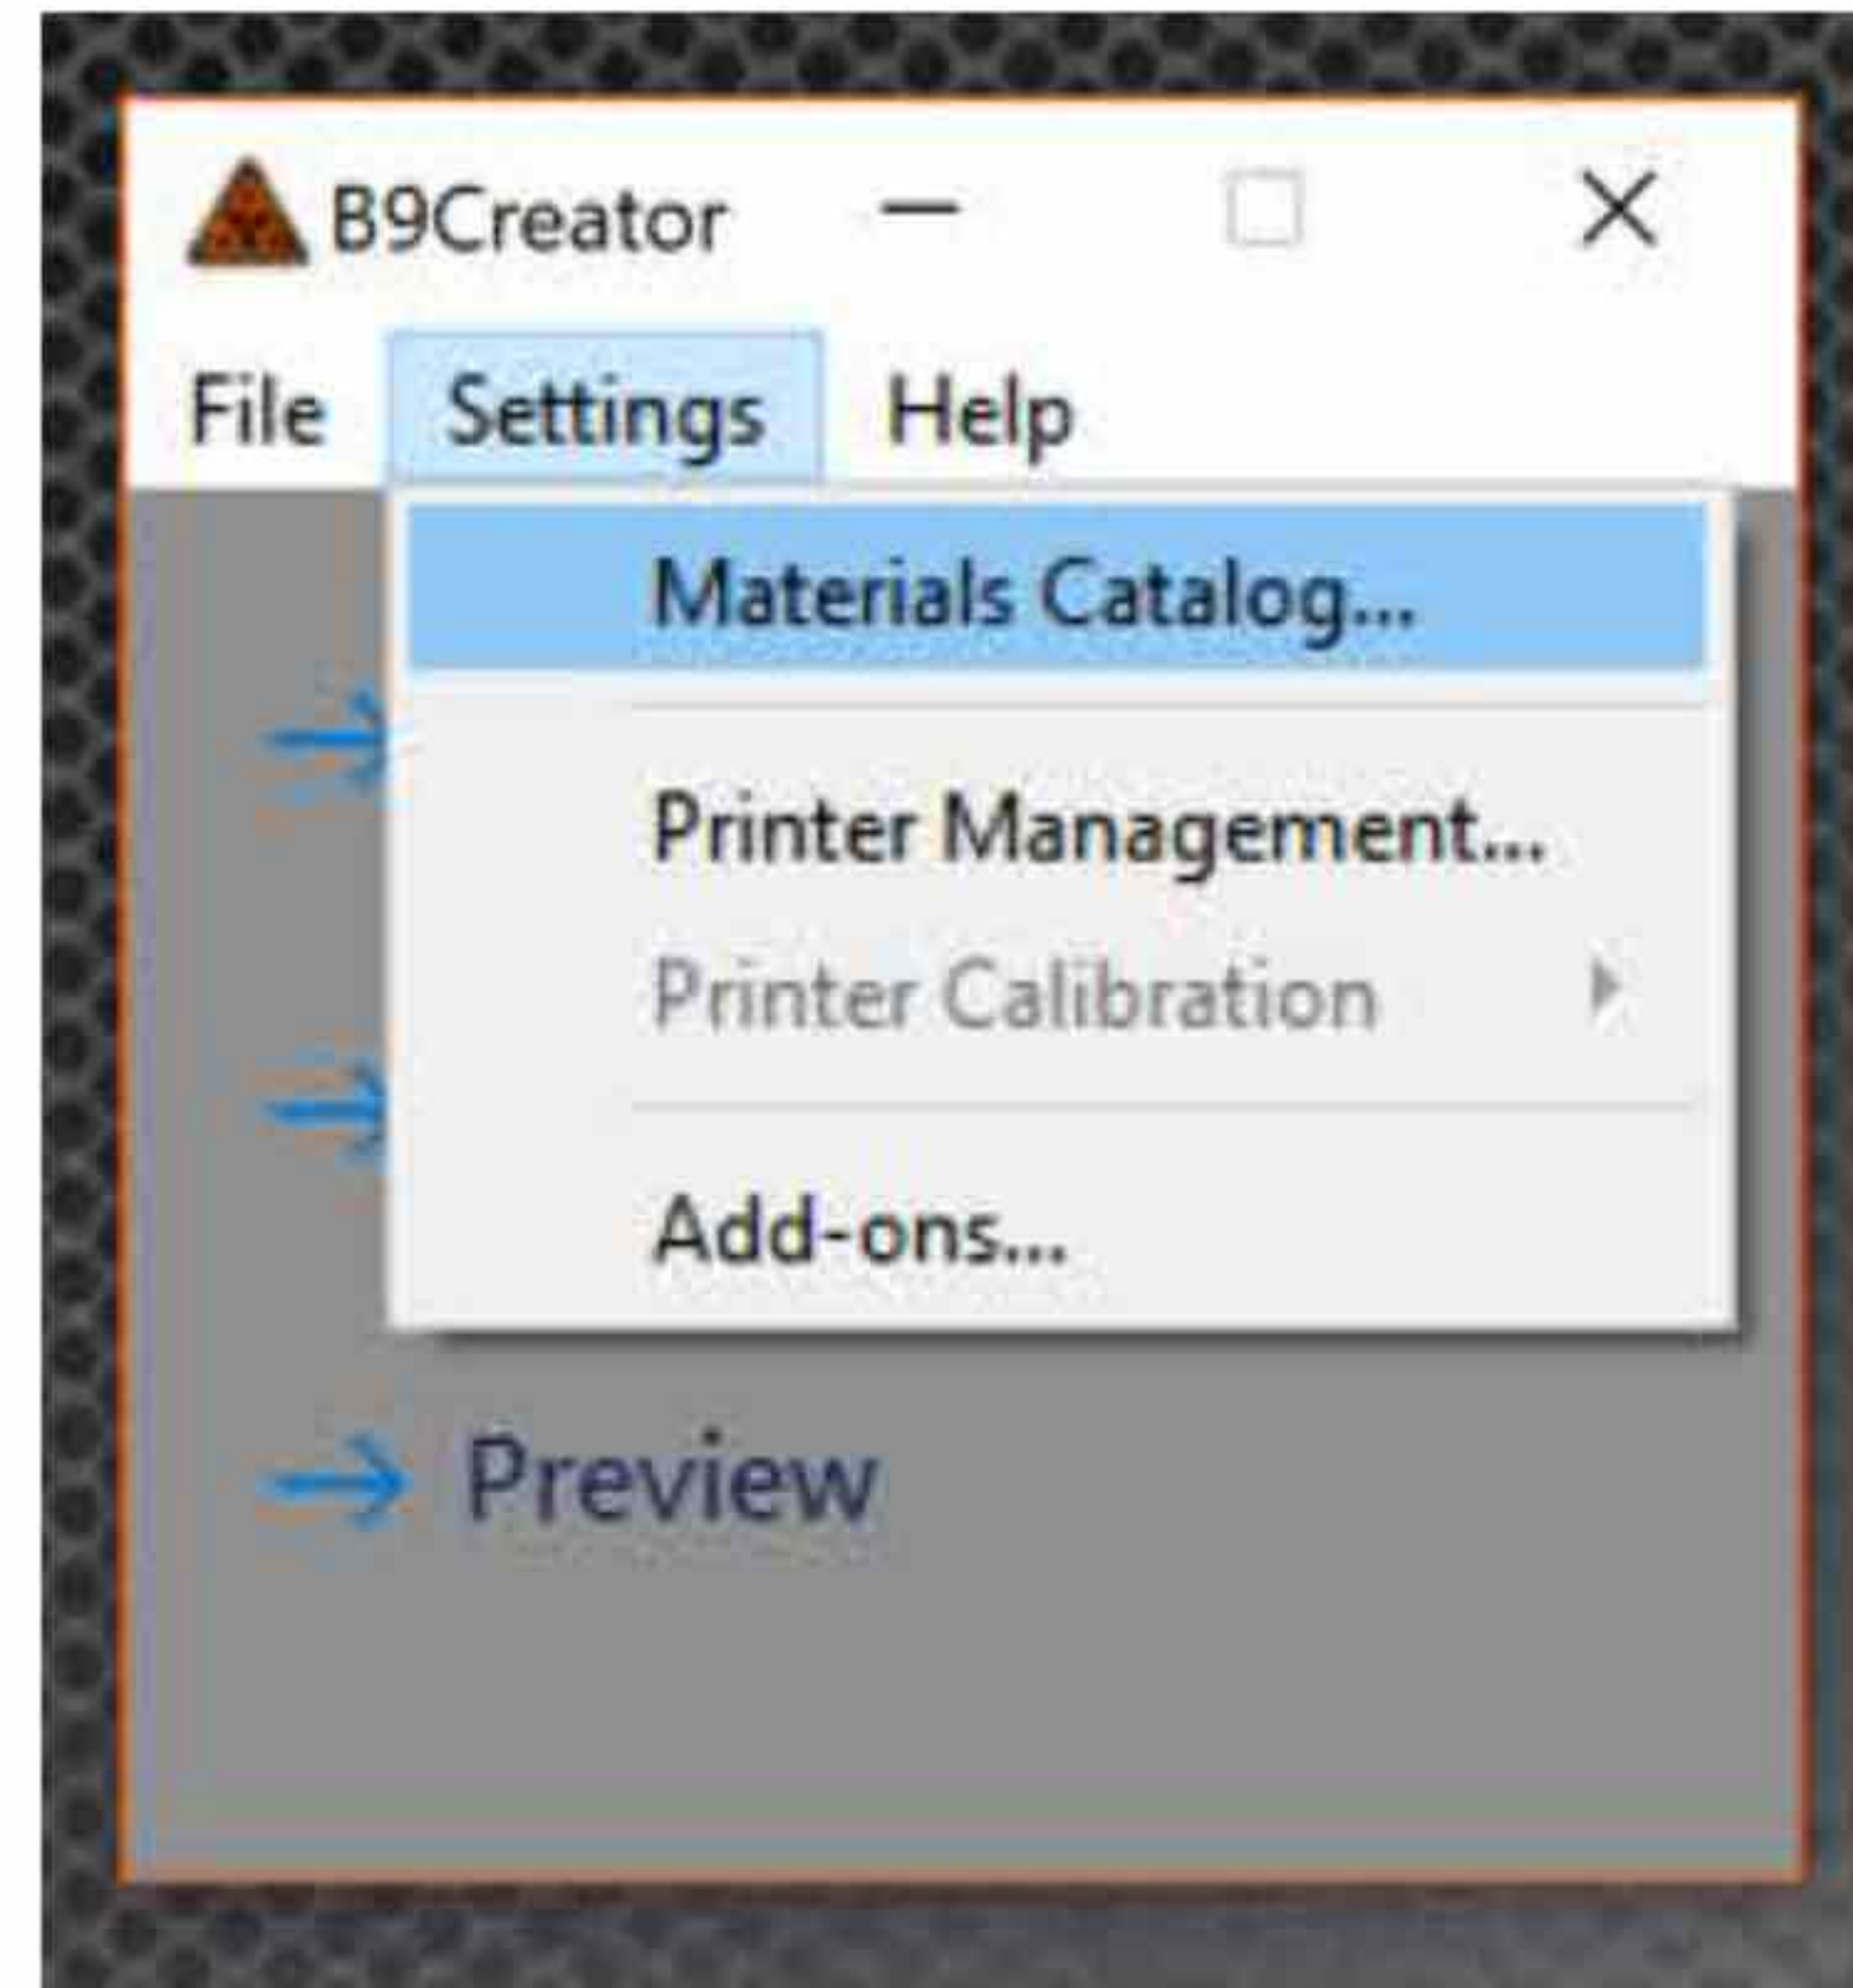


3. Under the name field
  - Select B9R-5-Dent Model
  - Click Duplicate

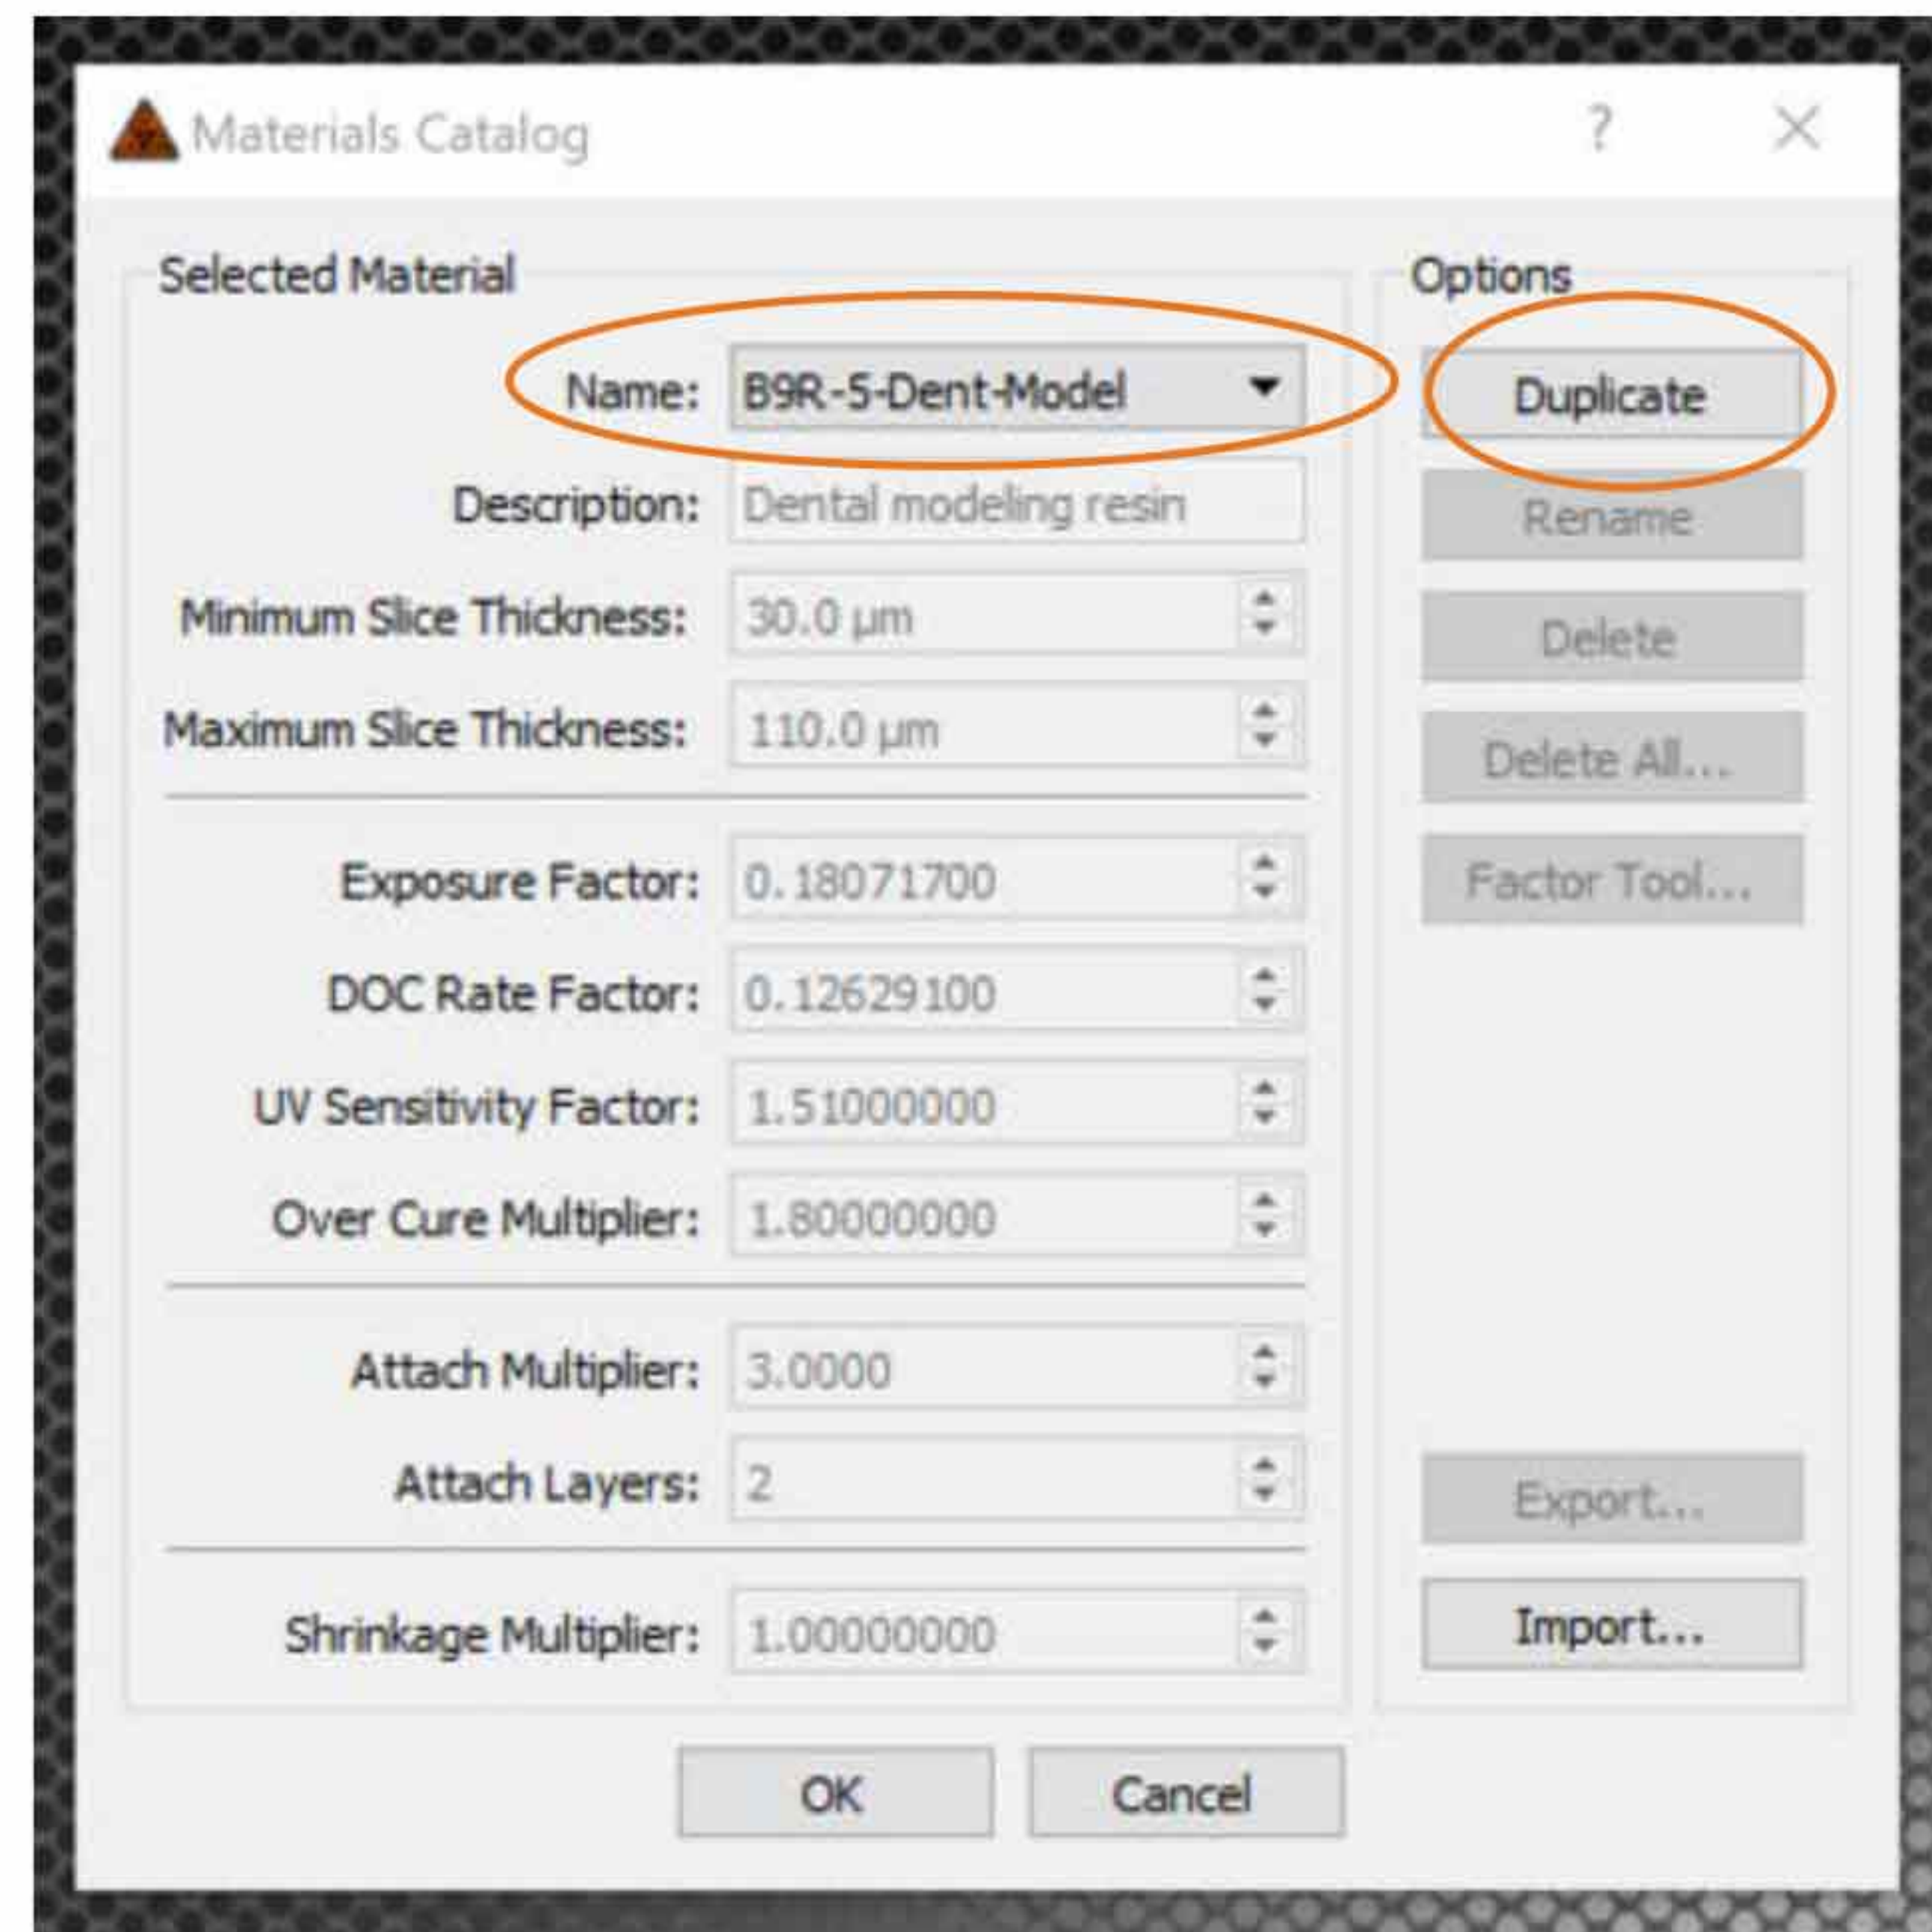


## Gray Resin Settings for the B9Creator


4. Enter the name Gray and click Duplicate

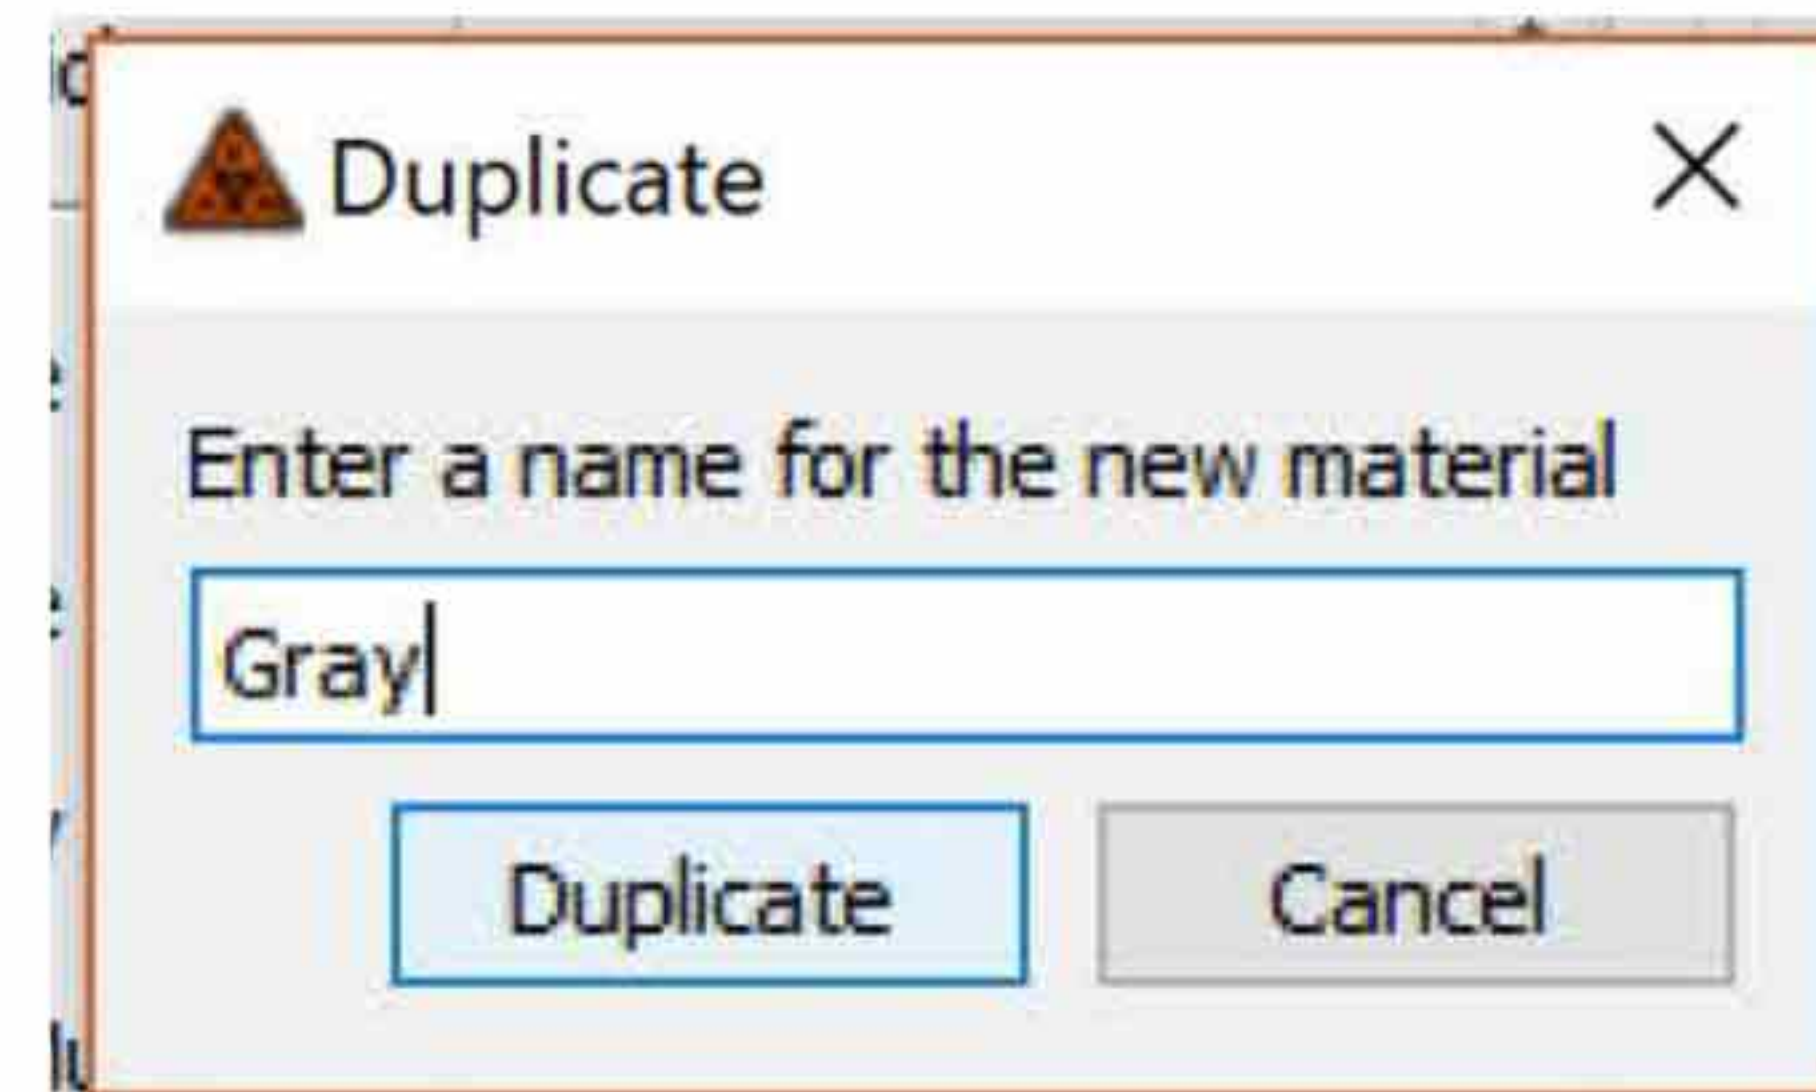

5. Change the description to Prototyping Resin

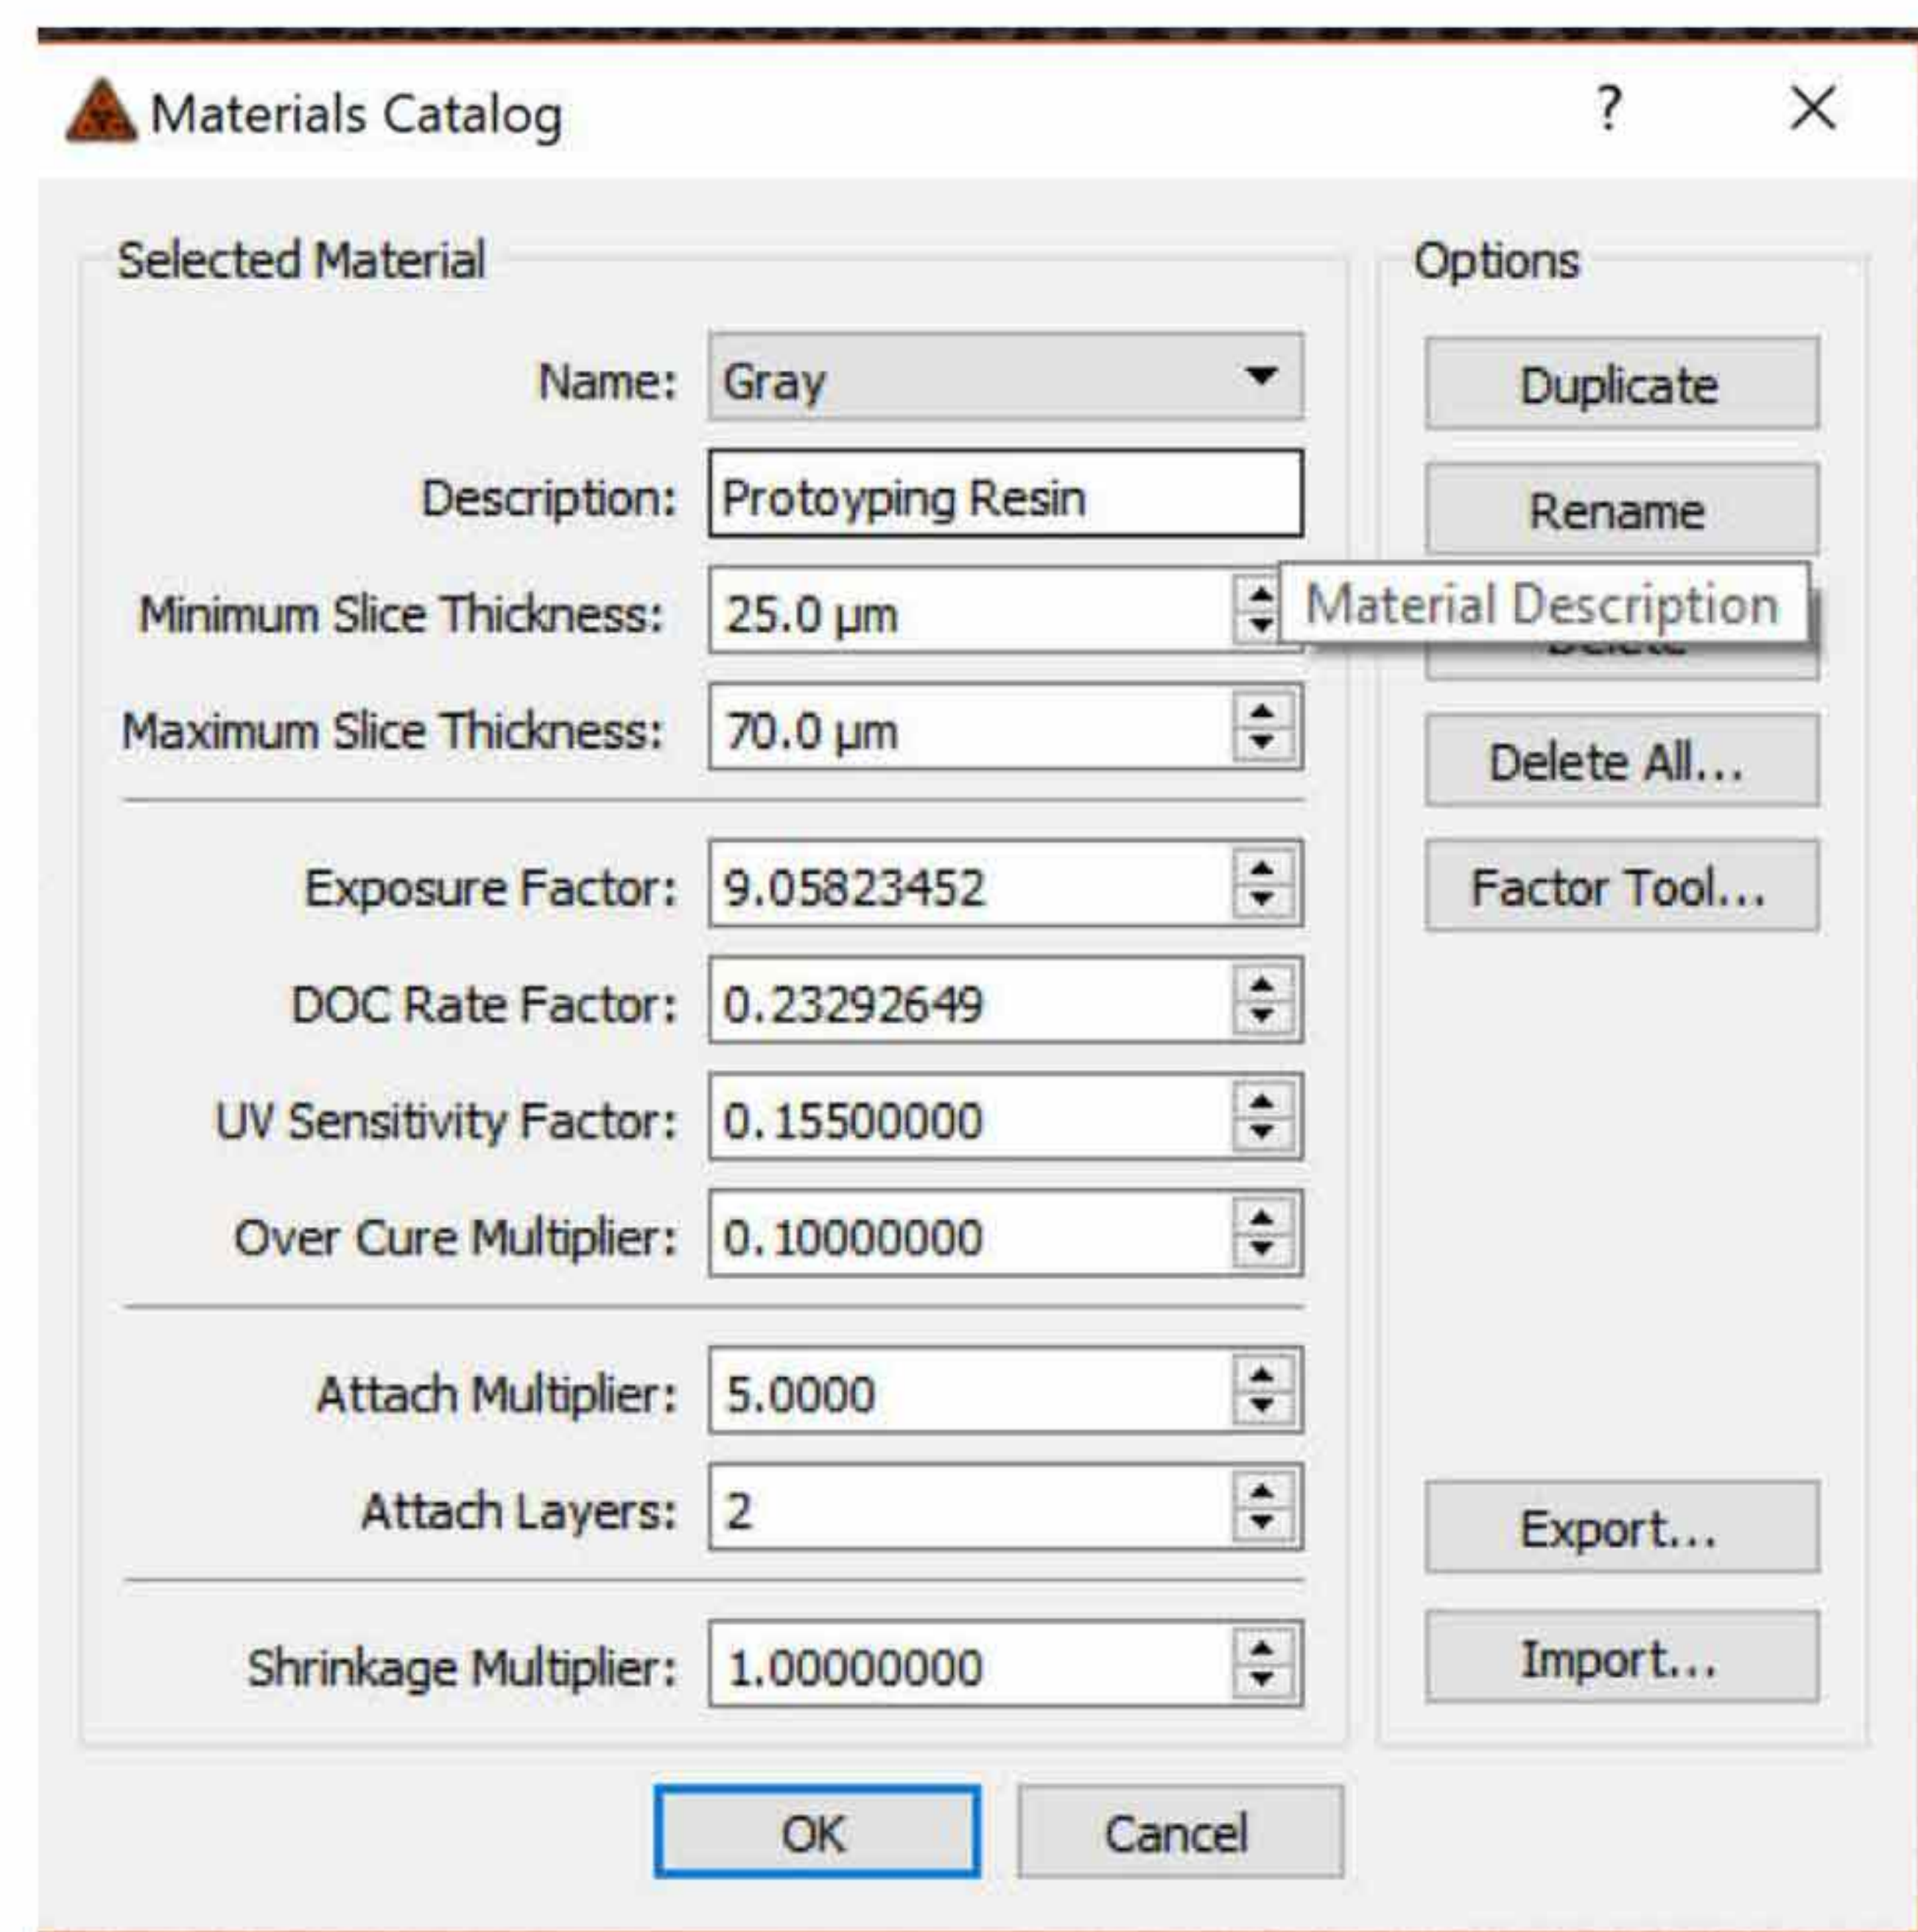


6. Click Export & Save

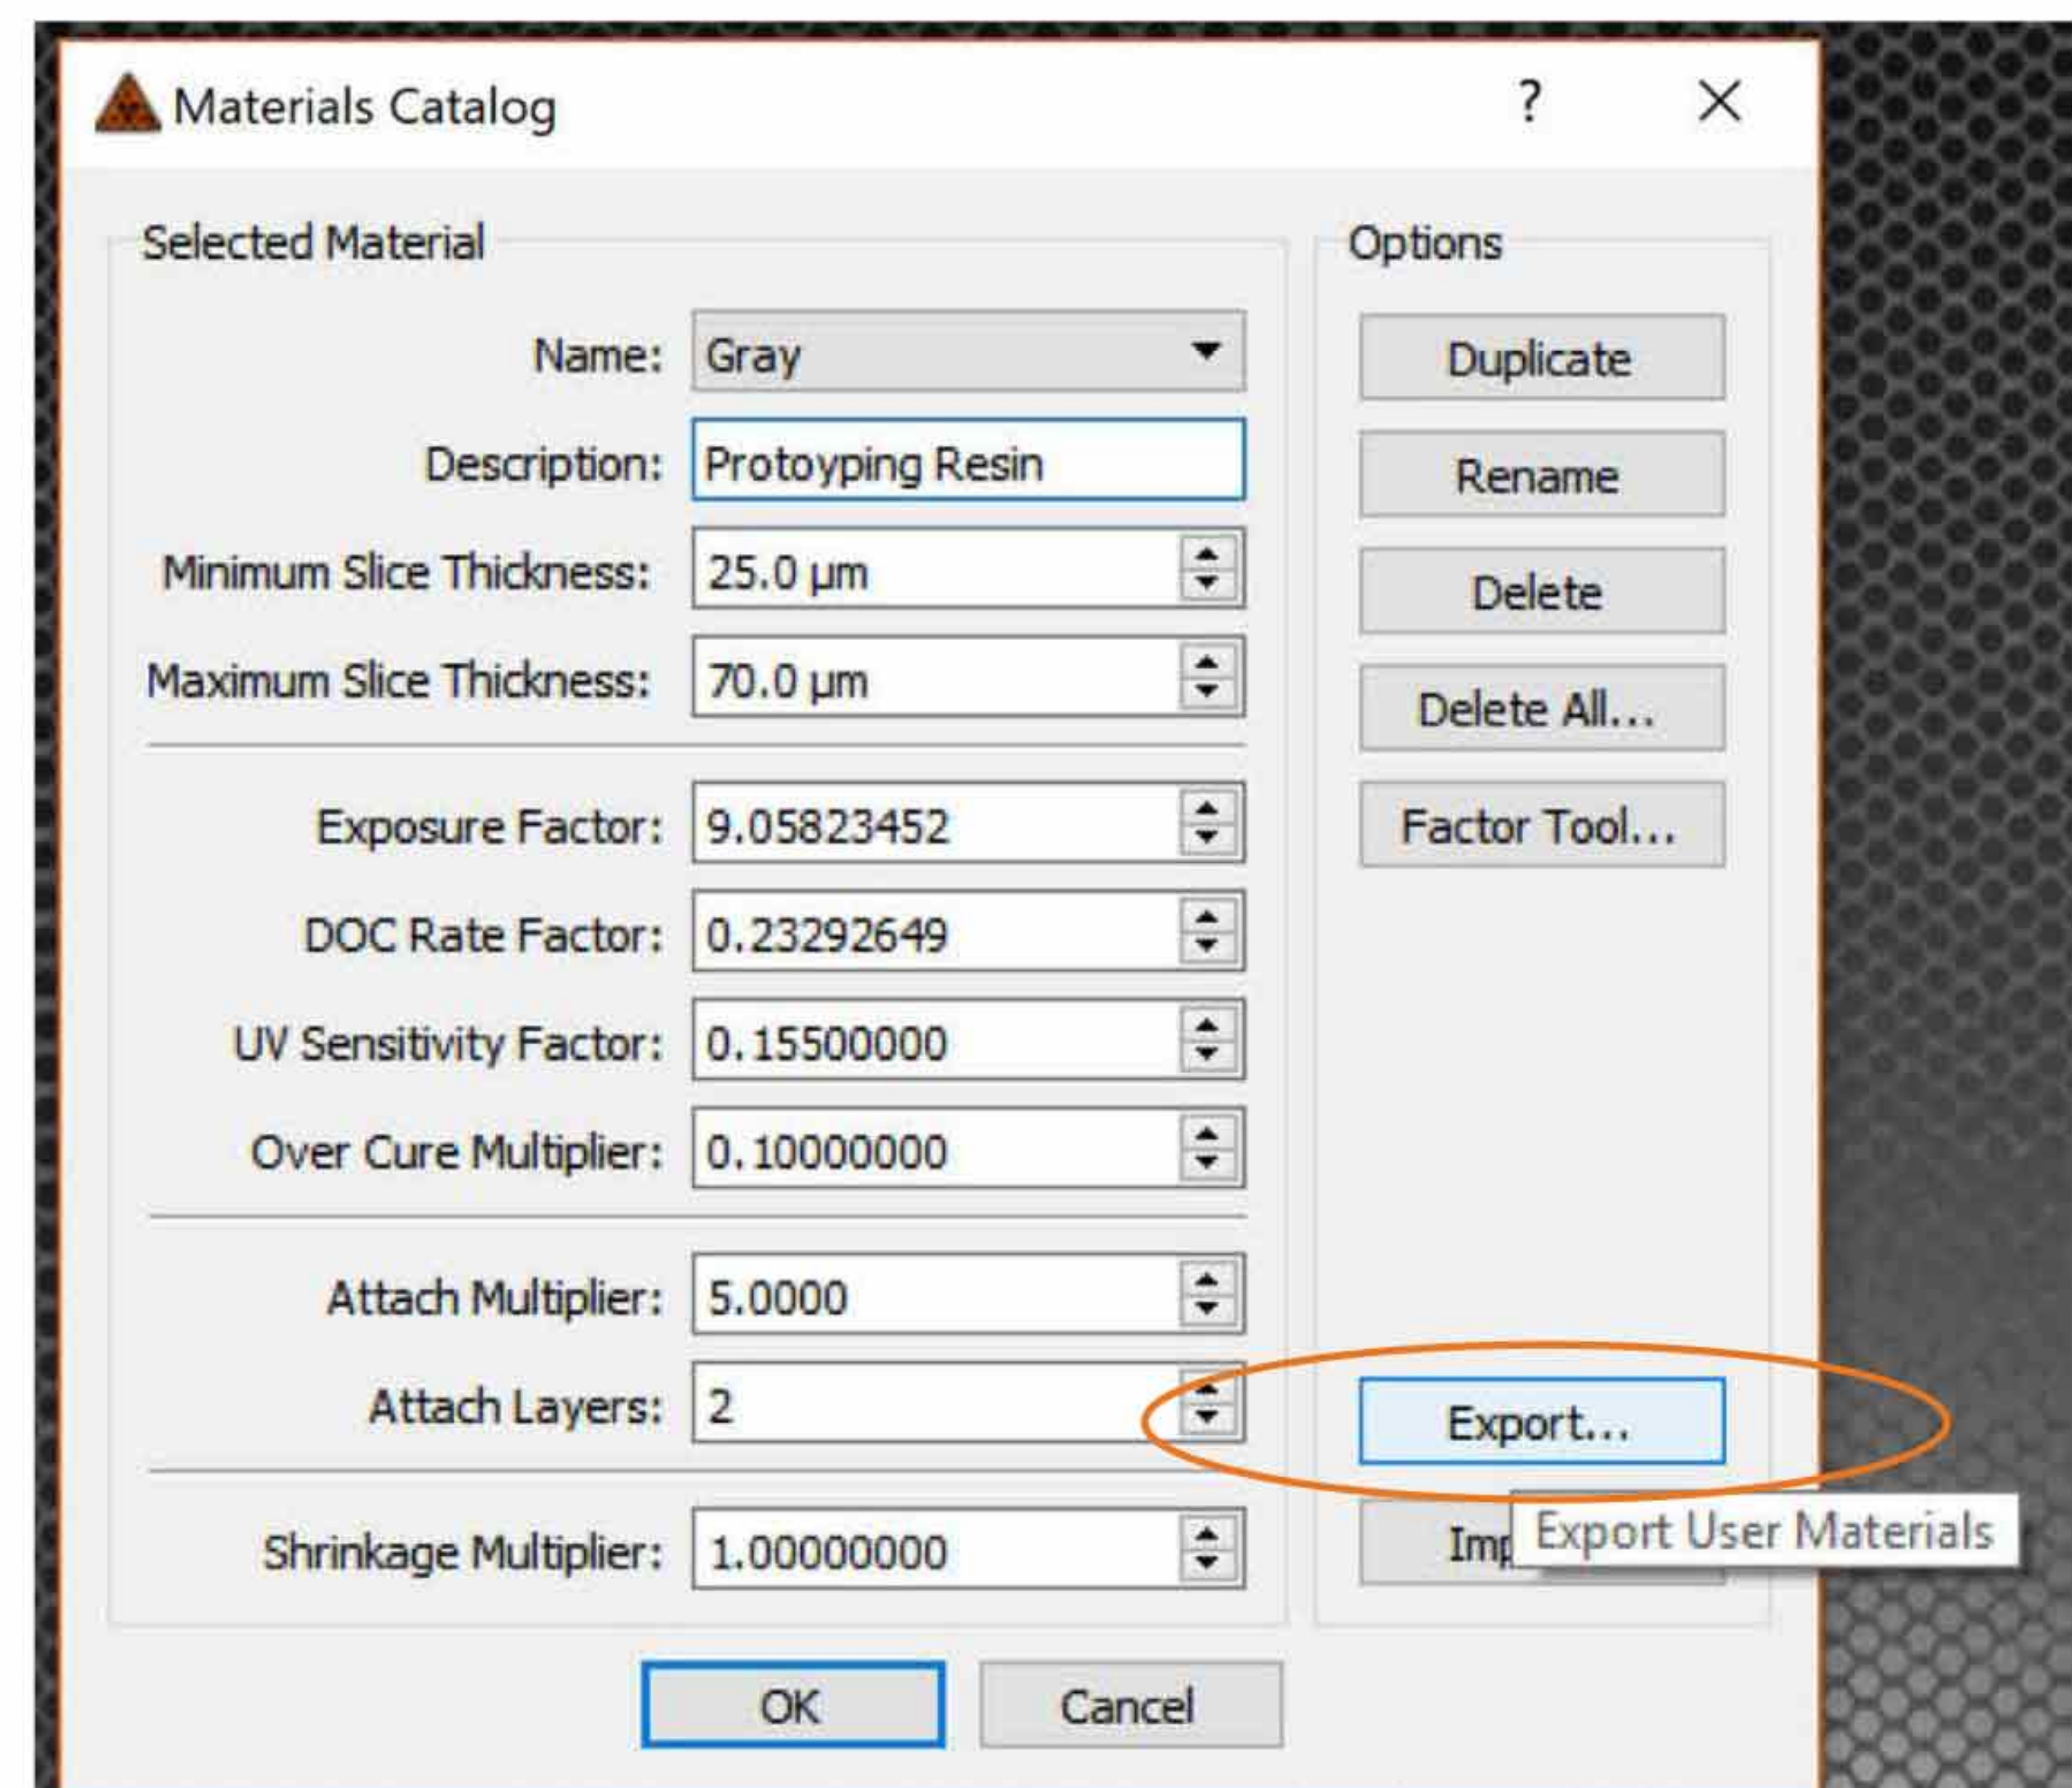

# Gray Resin Settings for the B9Creator

7. Save and Import the settings back into the B9Creator software.

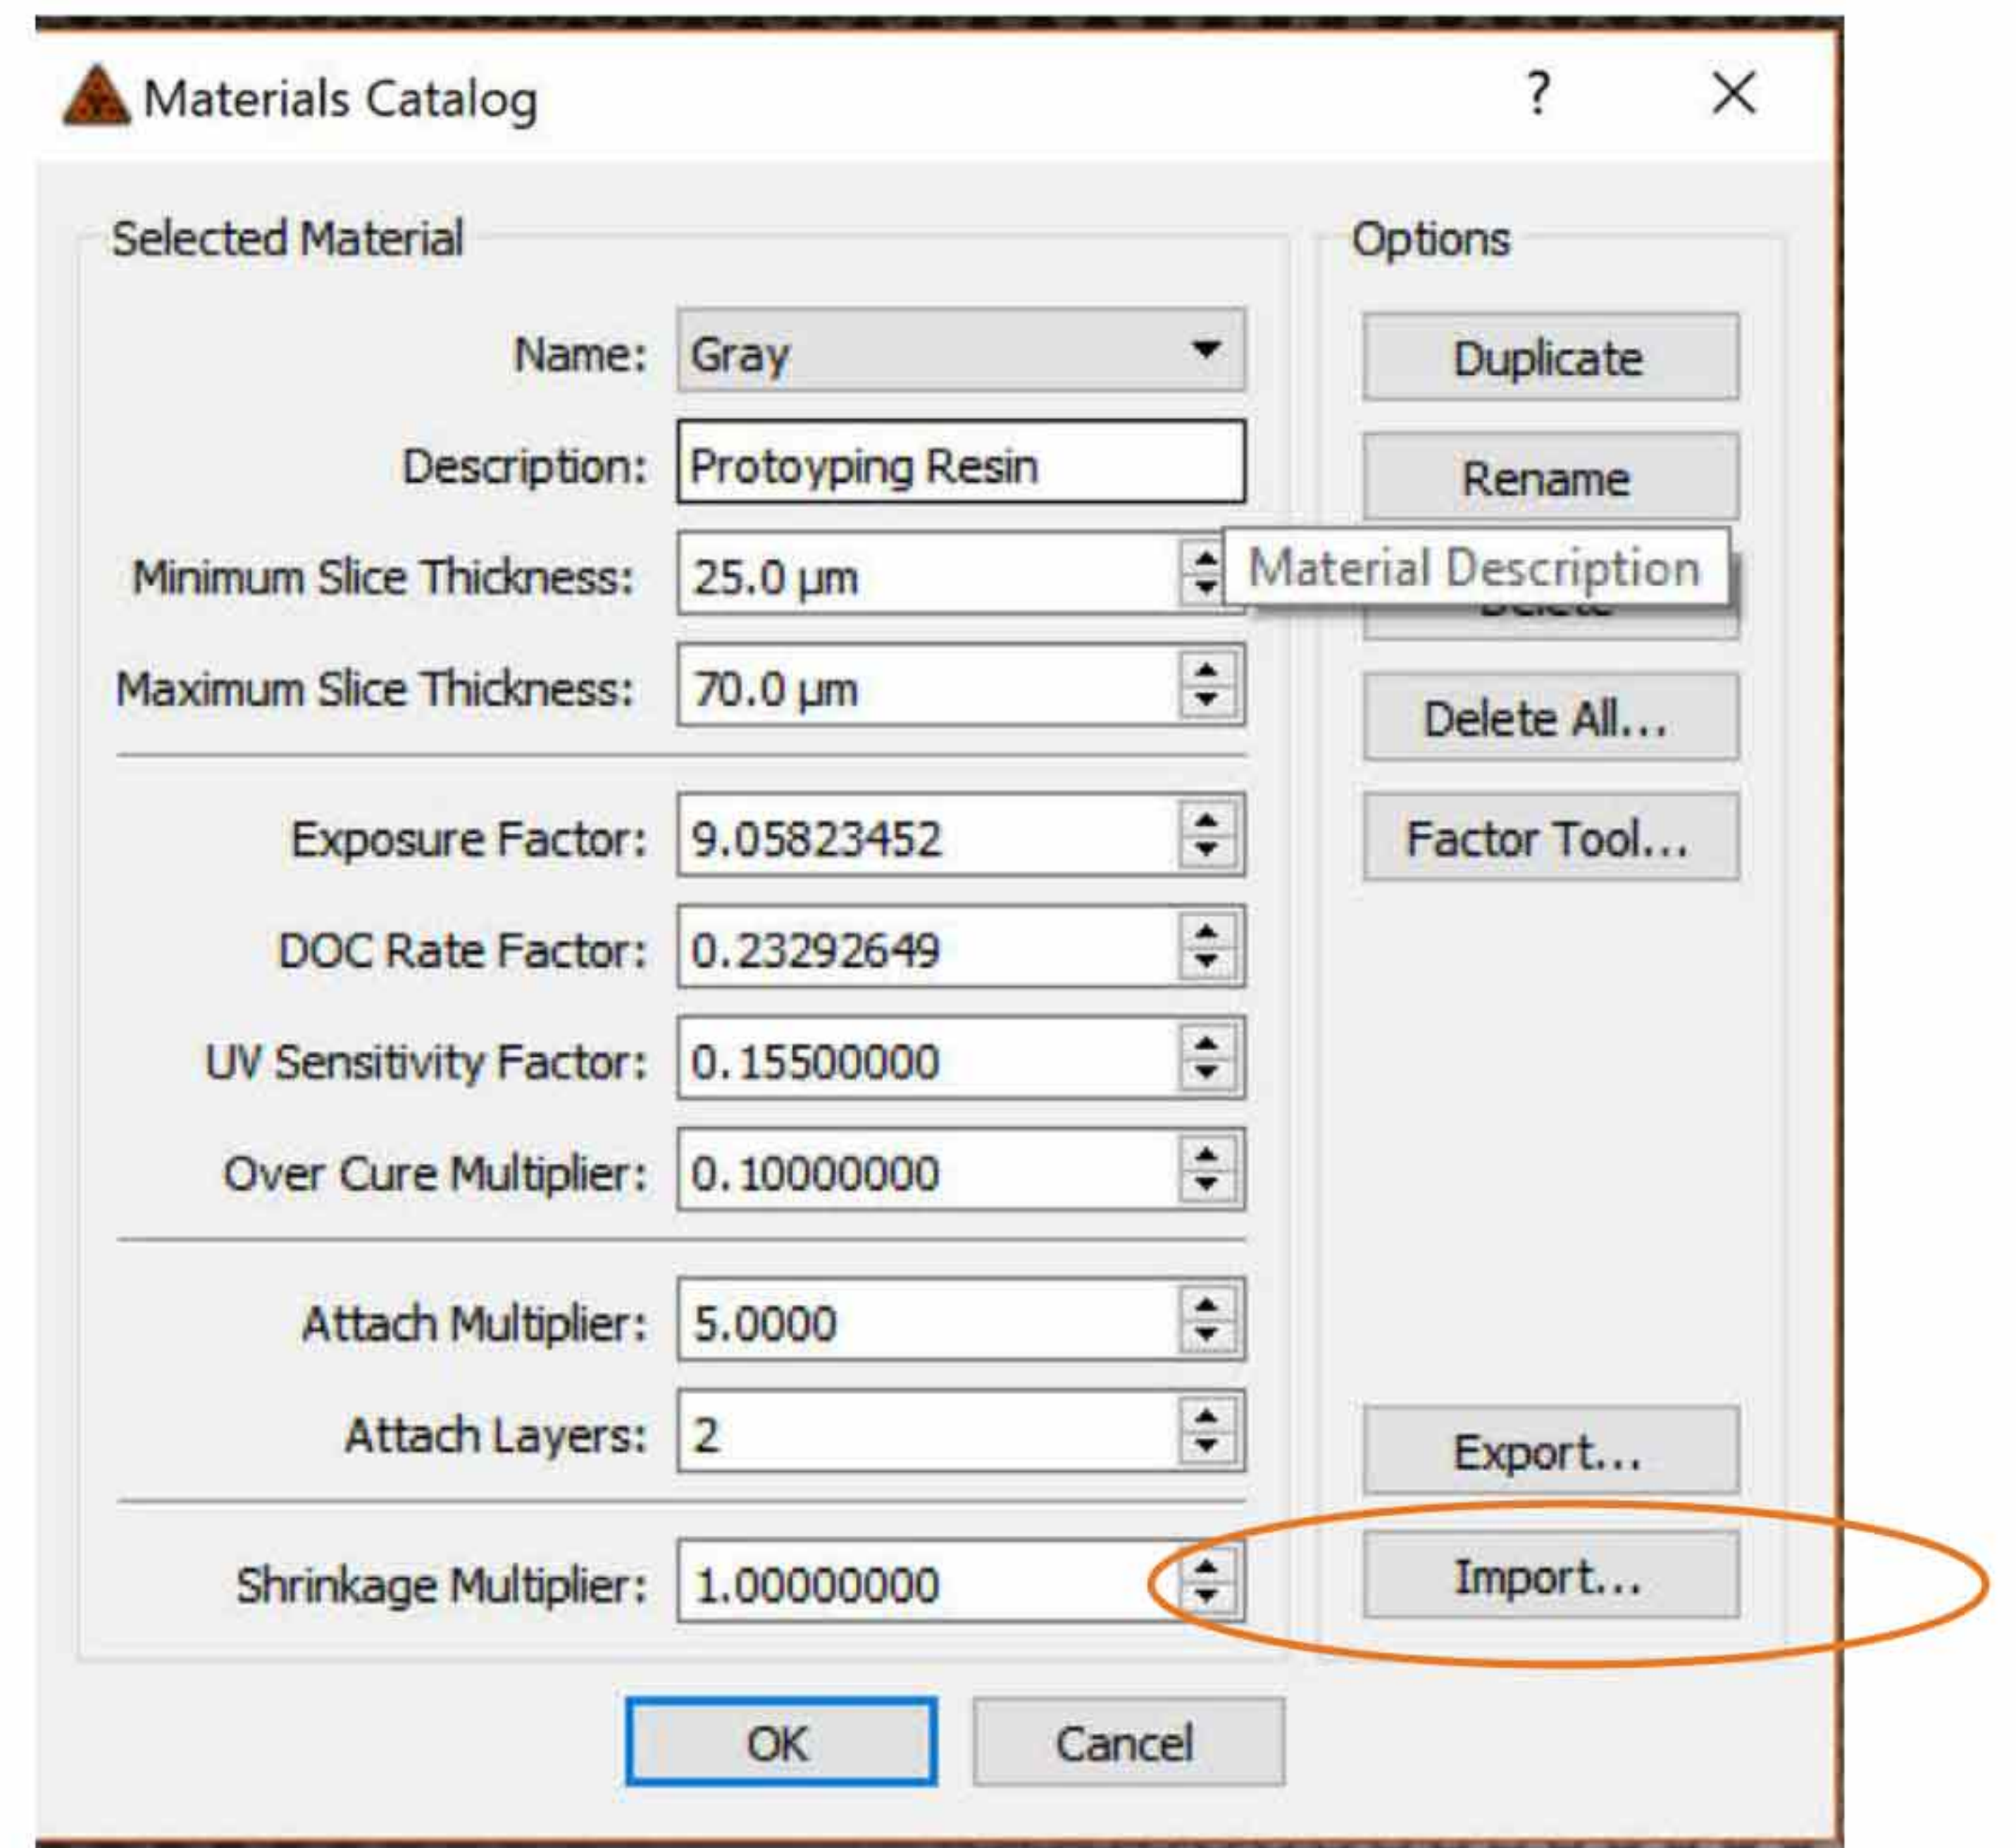

\*\*\*Please note: Exposure should be adjusted to dial in settings specifically for your printer or application.